


CRAWLTEK R E V O L U T I O N

491 W. GARFIELD AVE., COLDWATER, MI 49036 • 517.278.1039
CRAWLTEKREVOLUTION.COM • E-MAIL: SALES-CRAWLTEK@RIDEFOX.COM

INSTALLATION INSTRUCTIONS

INFERNO COWL ARMOR TJ43201

FOR USE WITH ALL
TJ/LJ MODELS FROM 1997-2005

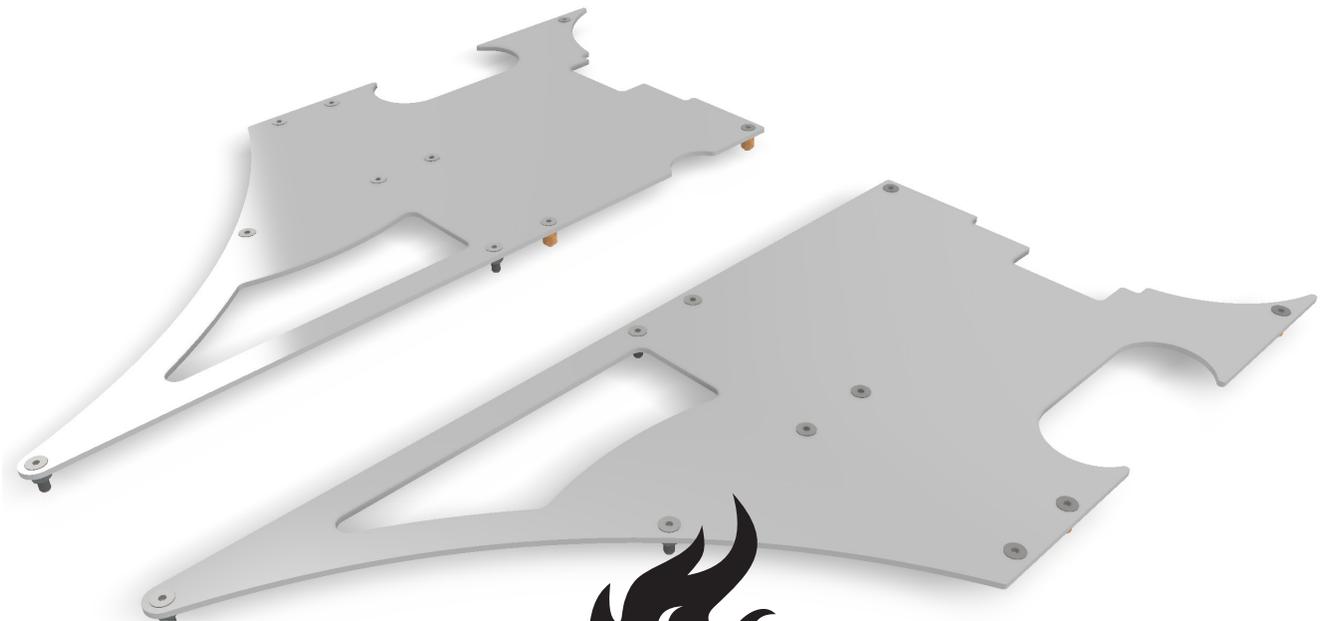

CrawlTek YouTube

PLEASE READ THROUGH INSTRUCTIONS BEFORE INSTALLING

2020-11-24

WHAT'S IN THE BOX?

PLEASE VERIFY KIT CONTENTS BEFORE BEGINNING INSTALLATION

PART #	Qty	DESCRIPTION
06121	1	ARMOR - TJ INFERNO COWL - DRIVER
06122	1	ARMOR - TJ INFERNO COWL - PASSENGER
CWLU30010	1	DECAL: CRAWLTEK GEARSHIFT 3.5" X 3.5"
CWLU30020	1	DECAL: CRAWLTEK EYES 6" X 2"
CWLU30030	1	DECAL: CRAWLTEK JAX 3.75" X 2.8"
	20	5/16"-18 X 3/4" HEX STAINLESS STEEL FLAT SOCKET CAP SCREW
	10	5/16"-18 ZINC SERRATED HEX FLANGE NUT
	12	5/16"-18 .027-.150 LARGE FLANGE RIBBED NUTSERT STEEL

TOOLS REQUIRED

SAFETY GLASSES

STEP BIT

17/32" DRILL BIT

3/8" DRILL BIT

1/8" DRILL BIT

1/2" WRENCH

3/16" ALLEN

PAINTERS TAPE

RUBBER MALLET

CENTER PUNCH

CLAMPS

PRE-INSTALLATION NOTES

1. CRAWLTEK TJ INFERNO COWL ARMOR IS DESIGNED TO BE USED WITH THE CRAWLTEK TJ INFERNO HIGHLINE FENDERS.

INSTALLATION OF INFERNO COWL ARMOR

STEP 1:

PLACE COWL ARMOR ON THE SIDE OF YOUR INSTALLED INFERNO HIGHLINE FENDER, HOLD IN PLACE WITH CLAMPS. (YOU MAY NEED TO LOOSEN THE INFERNO HIGHLINE FENDER AT THE FIRE WALL TO RAISE OR LOWER THE FENDER TO ALIGN THE COWL ARMOR)



STEP 2:

ALIGN THE BOTTOM EDGE OF YOUR COWL ARMOR WITH YOUR CRAWLTEK ROCKER GUARD IF INSTALLED.

STEP 3:

ONCE THE COWL ARMOR IS POSITIONED WHERE YOU LIKE IT START AT THE TOP CORNER FURTHEST FROM THE FRONT OF THE VEHICLE, MARK WITH A CENTER PUNCH AND DRILL A 1/8" PILOT HOLE STEPPING UP TO 3/8". INSTALL 5/16" FLAT SOCKET CAP SCREW AND FLANGE NUT. YOU WILL WANT THIS NUT SNUG ENOUGH TO KEEP THE ARMOR IN PLACE.

STEP 4:

NOW DRILL A HOLE MARK AND DRILL THE TOP FRONT HOLE, YOU WILL BE DRILLING THROUGH 3/16" STEEL SO THIS WILL TAKE A LITTLE MORE TIME. INSTALL 5/16" FLAT SOCKET CAP SCREW AND NUT.

STEP 5:

MARK AND DRILL REMAINING HOLES, THE (4) REMAINING HOLES IN EACH SIDE OF THE VEHICLE BODY WILL BE NEED TO HAVE NUT-SERTS INSTALLED.

STEP 6:

ONCE ALL PILOT HOLES HAVE BEEN DRILLED REMOVE COWL ARMOR TO INSTALL NUT-SERTS. ENLARGE PILOT HOLES TO 17/32", INSTALL (4) 5/16 NUT-SERTS PER SIDE.

STEP 7:

USING THE SUPPLIED HARDWARE REINSTALL COWL ARMOR TO VEHICLE.





YOU'RE NOT DONE YET!

Thank you for your new CrawlTek Revolution purchase! Follow us on facebook for up to date coverage of new product releases. We love feedback, if you have any questions about the installation or parts were missing please contact us at sales-crawltek@ridefox.com or call us at 517.278.1039.

Be sure to show off your jeep to the rest of the CrawlTek Revolution online. Find us on facebook and instagram to keep up on new products, upcoming events and more action. Tag us @crawltek for a chance to get featured

